6. Exploded View & Parts List

6-1 CS20H4MJ0X/RCH

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

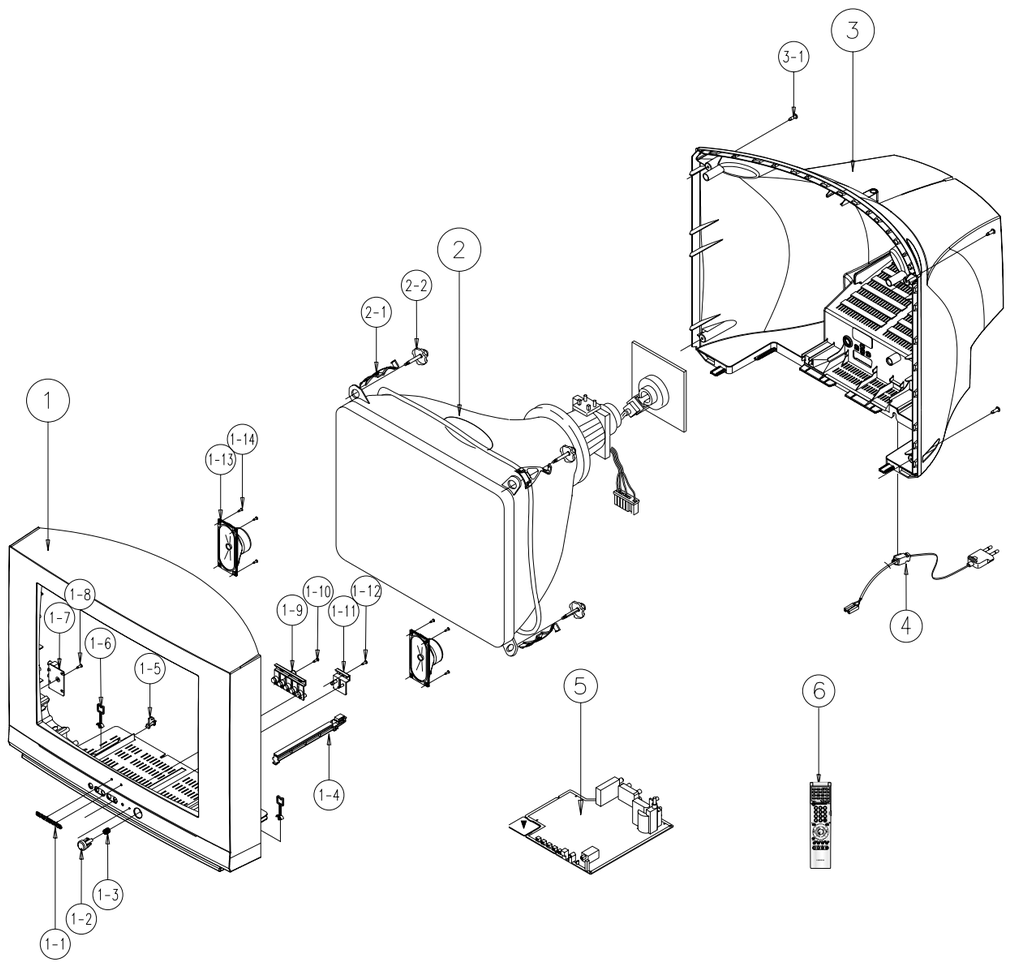

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA96-00957F	ASSY COVER P-C/FRONT;20H4,HIPS HB,BLK,SP		1	T0003	
1*	AA64-02796G	CABINET-FRONT;20H4,HIPS,HB,BLK,BK708P,EG		1	T0003	S.N.A
1-1	AA64-70123D	BADGE-BRAND;-,AL,-,-,L=50,SAMSUNG,GOLD,R		1	T0057	S.N.A
1-2	AA64-02799A	KNOB-POWER;20H4,ABS,HB,BLK,NO-SILK		1	T0023	
1-3	AA61-60003J	SPRING ETC-CS;-,SUS304,-,-,OD6,N7,OD6,-,		1	CIS7	S.N.A
1-4	AA61-00721C	HOLDER-RAIL;H4,HIPS,V0,GRAY		1	T0156	S.N.A
1-5	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-		1	T0607	S.N.A
1-6	AA65-30111A	CLAMPER CORE-WIRE;ALL MODEL,NYLON,V0,-,W		1		S.N.A
1-7	AA94-13418D	ASSY PCB MISC-A/V SIDE;21D8,KS1A,MONO		1	T0091	S.N.A
1-8	6003-001268	SCREW-TAPTITE;TH,+,B,M4,L12,ZPC(YEL),SWR		1	T0081	
1-9	AA64-02801A	KNOB-CONTROL;20H4,ABS,HB,BLK		1	T0022	
1-10	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-11	AA64-02803A	WINDOW-RMC,LED;20H4,ACRYL,CLR		1	T0299	S.N.A
2	AA03-10029X	CRT COLOR;A48KRD82X(H),0MG,2.20MH,30.0MH		1	T0063	
2-1	AA65-30107A	CLAMPER CORE-D,COIL;20~22 INCH,NYLON 66,		2	T0527	S.N.A
2-2	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	S.N.A
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-		1	V999S	
3	AA64-01029G	CABINET BACK;20H4,HIPS,HB,BLK		1	T0015	
3-1	AA60-10050T	SCREW-TAPPING;-,SWRCH18A,M4,L20,RH,+,2S,		4	T0081	S.N.A
4	AA96-20109B	ASSY POWER CORD;-,CP2/NO(4.0),H/C250,KKP		1	T0066	S.N.A
5	AA94-13232L	ASSY PCB MAIN;CS20H4MJ0X/RCH,KS1A,MAC		1	T0073	
6	AA59-00104D	REMOCON;-,TM59,SIM806E,24,L/GRAY,-,PAL-M		1	T0074	

6-2 CS15K8MJ0X/BWT

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

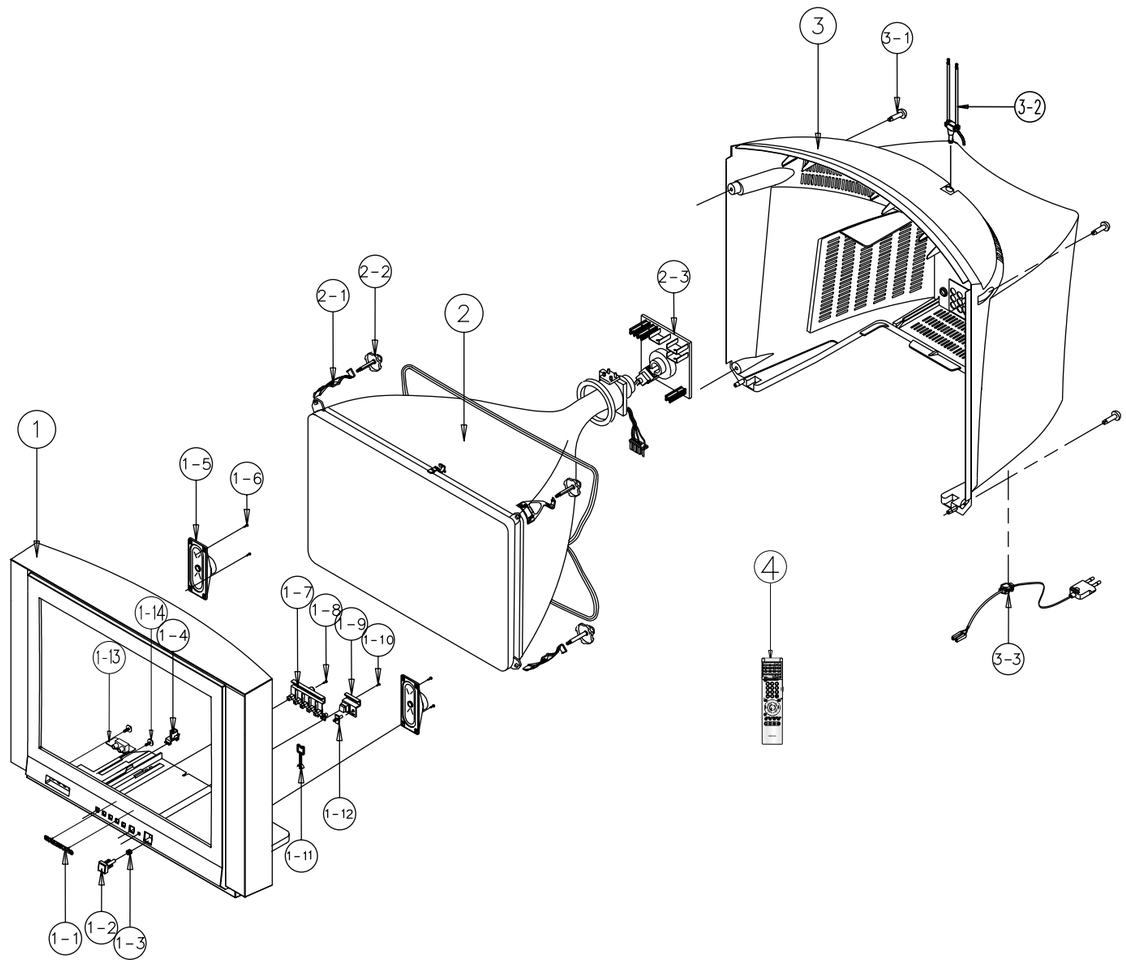

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA91-00619U	ASSY CABINET FRONT;15K8,(SPK),CIS,S907P+		1	T0003	
1*	AA64-01730V	CABINET FRONT;15K8,HIPS,HB,G4309,S907P+D		1	CIS3	S.N.A
1-1	AA64-01303C	INLAY AV;21A8,PS SHEET,T0.3,ISC-00061S,M		1	T0578	S.N.A
1-2	AA64-01371B	KNOB POWER;15K8,ABS,-,-,-,HB,G3676,-,SV9		1	T0023	
1-3	AA61-60003J	SPRING ETC-CS;-,SUS304,-,-,OD6,N7,OD6,-,		1	CIS7	S.N.A
1-4	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-		1	T0607	S.N.A
1-5	3001-001020	SPEAKER;3W,8OHM,90DB,140HZ		2	T0082	
1-6	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		8	T0081	
1-7	AA64-01370B	KNOB CONTROL;15K8,ABS,-,-,-,HB,G3676,-,S		1	T0022	
1-8	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-9	AA64-00816B	WINDOW REMOCON;-,21A8,-,PC,V0,VIOLET,-		1	T0238	S.N.A
1-10	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-11	AA65-30105A	CLAMPER CORE-WIRE;ALL MODEL,NYLON 66,V2,		1		S.N.A
1-12	AA64-00818B	INDICATOR LED;21A8,ACRYL,-,CLR,-,-,-		1	T0059	
2	AA03-00146A	CRT COLOR;A36QDT351X,380MG,2.5MH,22.5MH,		1	T0063	
2-1	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	S.N.A
2-2	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-		1	V999S	
3	AA64-01731G	CABINET BACK;15K8,HIPS,V2,G4309		1	T0015	
3-1	AA60-10050T	SCREW-TAPPING;-,SWRCH18A,M4,L20,RH,+,2S,		4	T0081	S.N.A
3-2	AA96-20109B	ASSY POWER CORD;-,CP2/NO(4.0),H/C250,KKP		1	T0066	S.N.A
4	AA59-00198F	REMOCON;,TM59,DREAM,24,L/GRAY,MONO,PAL-T		1	T0074	